

Installation Instructions TPS Adapter and Sensor for 964 Porsche with Plastic Manifold


Remove the factory throttle position micro switch and cam components



Install the adapter and sensor as shown. Leaving all the screws approximately 1/4 turn loose for alignment purposes. Tighten the screws in the following order

1. Red X2
2. Yellow X2
3. Green X1

Note: Be sure the set screw seats squarely on the throttle shaft flat while tightening.

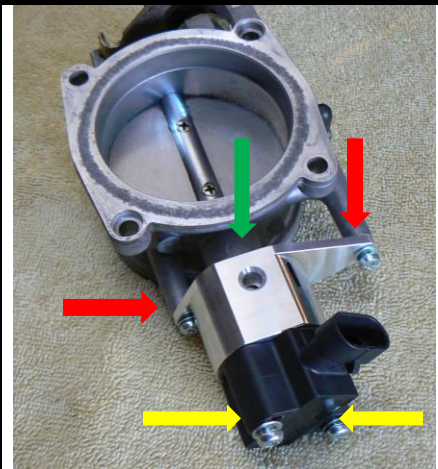

The completed assembly.
Adjust the closed throttle position to .6 volts

This kit uses is a 5V sensor hall sensor.

Wiring is as follows

1. 5V
2. Sensor Ground
3. Output (Signal)

